



## How to cut PLASKOLITE Lighting Panels

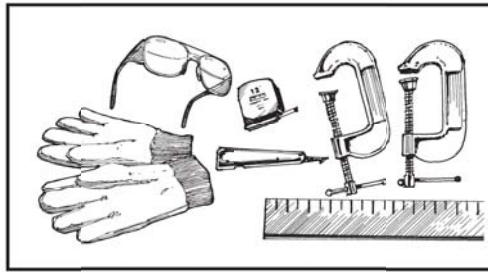


### Step 1: Tools needed

Plastic scoring tool, tape measure, clamps, straight edge, safety glasses and gloves.

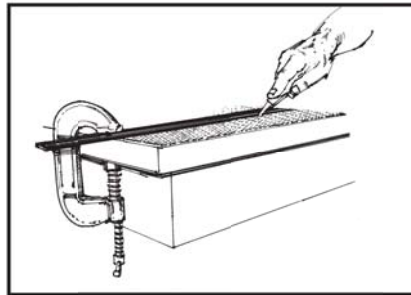


### Step 2: Measure & Score

Measure, clamp straight edge, lightly pull scoring tool across the smooth side of the panel, repeat until 1/2 through.

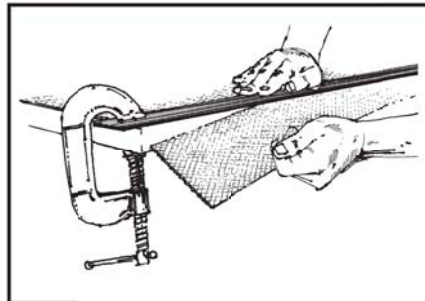

### Step 3: Snap Off

Hang scrap portion over edge of workbench, apply gentle downward pressure to break off.

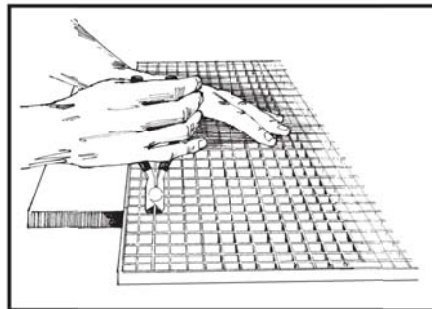

### Lighting Louvers:

Snip off excess with diagonal cutters.

**PLASKOLITE, INC.**

P.O. Box 1497 • Columbus, Ohio 43216  
614-294-3281 • Fax: 877-538-0754  
Email: [plaskolite@plaskolite.com](mailto:plaskolite@plaskolite.com) • [www.plaskolite.com](http://www.plaskolite.com)